

## QUICK START GUIDE

**myPhone MS2301/MS2301e****1. Table of contents**

<b>1. Table of contents .....</b>	<b>18</b>
<b>2. Safety.....</b>	<b>19</b>
<b>3. The use of the manual .....</b>	<b>21</b>
<b>4. Important information .....</b>	<b>22</b>
<b>4.1 Trademarks .....</b>	<b>23</b>
<b>5. Package content.....</b>	<b>23</b>
<b>6. Technical Specifications.....</b>	<b>23</b>
<b>7. Appearance of the phone.....</b>	<b>24</b>
<b>8. Buttons.....</b>	<b>25</b>
<b>9. Using the touch screen .....</b>	<b>25</b>
<b>9.1. Touch .....</b>	<b>25</b>
<b>9.2 Swipe .....</b>	<b>26</b>
<b>9.3 Triple click.....</b>	<b>26</b>
<b>9.4 Hold and swipe .....</b>	<b>26</b>
<b>9.5 Slide in and out .....</b>	<b>26</b>
<b>10. Communication.....</b>	<b>27</b>
<b>10.1 Making calls .....</b>	<b>27</b>
<b>10.2 SMS - Messages.....</b>	<b>27</b>
<b>11. Maintenance of the device.....</b>	<b>27</b>
<b>12. Correct disposal of used equipment .....</b>	<b>28</b>
<b>13. Correct disposal of used battery .....</b>	<b>28</b>

CAUTION!	Statement
<p>The manufacturer is not responsible for the consequences of situations caused by improper use of the phone or failure to follow the instructions in the operating manual.</p>	<p>The software version can be upgraded without earlier notice. The manufacturer's representative reserves the right to decide on the correct interpretation of this manual.</p>

## 2. Safety

### –DO NOT RISK–

All wireless devices may cause interferences, which could affect the quality of other connections. *Do not switch the device on in places which are prohibited from using cell phones, or when it may cause interferences or other dangers.* Always abide by any kinds of prohibitions, regulations and warnings conveyed by the staff.



### –RESTRICTIONS IN USE–

Wi-Fi wireless connectivity uses the 2.4 GHz band and the 5 GHz band. The 5 GHz Wi-Fi band shall not be used outdoors in the European Union. Please observe the national and local regulations at the place of use.

### –QUALIFIED SERVICE–

Only qualified personnel or an authorized service center may install or repair this product. Repairing the device by an unqualified or unauthorized service technician may result in damage to the device and void the warranty.

**–ALARM CALLS–**

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to this type of remote areas.

**–PETROL STATIONS–**

Do not use your mobile phone while refuelling at a petrol station or in the vicinity of chemicals.

***CAUTION!*** *In places where there is a risk of explosion (i.e. Petrol stations, chemical factories etc.), it is advisable to turn off the phone. Please refer to regulations governing the use of GSM equipment in these places.*

**–ROAD SAFETY–**

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speakerphone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations of the country you are in, concerning the use of mobile phone while driving.

**–WATER AND OTHER LIQUIDS–**

Protect the device from water and other liquids. It can influence work and the life span of electronic components. Avoid using the device in environments with high humidity like kitchens, bathrooms or during rainy weather. Particles of water can cause the liquefaction of moisture in the device, and this may have a negative impact on the work of electronic components.

**–CHILDREN,&PHYSICALLY/MENTALLY DISABLED PEOPLE–**

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety.

This device is not a toy. Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach of children.

#### ***–BATTERY AND ACCESSORIES–***

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames - it might be dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one cable or a new charger. Use the original manufacturer's accessories only.



#### ***–HEARING–***

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.



#### ***–EYESIGHT–***

To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

### **3. The use of the manual**

Pictures of the device and screenshots contained in this user manual may differ from the actual product. Accessories attached to the smartphone set may differ from the illustrations included in manual.

Options described in the manual are found in Android system. Those descriptions may differ, depending on the version of the operating system and applications installed on the device.

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

#### **4. Important information**

The majority of applications which can be installed on the device are mobile apps. Modus operandi of such applications may be different from their counterparts installed on a personal computer. Apps installed on the device may vary depending on country, region, and hardware specifications. The manufacturer is not liable for problems caused by third party software. The manufacturer is not responsible for anomalies that may occur when editing the registry settings and modifying the operating system software. Attempts to modify the operating system can cause malfunctions and problems with applications. It may cause a loss of warranty.



#### **System Android™**

Android 13 GO focuses on better communication with other people, modern management of connected devices, and privacy and security enhancements.



#### **Google Play**

Google Play is your entertainment without borders. It brings together all your favorite entertainment and helps you discover it in new ways, anytime, anywhere. We've brought the magic of Google to movies, TV, books, apps and games, so you can get more from your content every day.

## 4.1 Trademarks

- Google, Android, Google Play are Google LLC trademarks.
- Oracle and Java are a registered trademarks of Oracle and / or its affiliates.
- Wi-Fi® Wi-Fi logo are a registered trademarks Wi-Fi Alliance association.
- All other trademarks and copyrights belong to their respective owners.

### Manufacturer

mPTech Ltd.

Nowogrodzka 31 street

00-511 Warsaw, Poland

Manufactured in China

## 5. Package content

- Mobile phone
- USB cable
- User manual

*If any of the above items is missing or damaged, please contact your dealer.*

## 6. Technical Specifications

**Processor:** SC9863A Octa-core 1.6GHz, 28nm

**Display:** 6.517" HD+ 1600x720

**Rear camera (main):** 13 Mpx

**Front camera (selfie):** 5 Mpx

**RAM memory:** 3 GB

**Internal memory:** 32 GB

**Operating system:** Android 13 GO

**Dual SIM:** nanoSIM+nanoSIM+microSD

**Connector:** USB-C

**Connectivity:** Wi-Fi 802.11b/g/n, GPS, Bluetooth 4.2, NFC

**2G:** 850/900/1900/2100

**3G:** 900/2100

**4G:** 800/850/900/1800/2100/2300/2600

**Battery:**

**MS2301** - Li-Poli 4000 mAh

**MS2301e** - Li-Ion 4000 mAh

**Additional functions:** Fingerprint reader

**Weight netto:** 189g

**Dimensions:** 164.5 x 76 x 9.1mm

**It is recommended to use the charger:** myPhone SWIFTCARGE DUO

**Charger input parameters:** AC 100-240V, 50/60Hz 1A 

**Charger output parameters:**

USB-C: 3.3-11V/2.0A, 5V/3.0A, 9V/2.22A, 12V/1.67A (20W MAX)

USB-A: 5V/3.0A, 9V/2.0A, 12V/1.5A (18W MAX)

USB-C+USB-A: 5V/3.0A (15W MAX)

## 7. Appearance of the phone

	Function
1	5 Mpx digital camera lens (selfie)
2	Camera flash / Torch
3	13 Mpx digital camera lens (rear)
4	The tray for SIM cards/ microSD
5	Volume control buttons
6	Blockade on/off button
7	External speaker
8	Multifunctional USB-C port
9	Minijack socket 3.5 mm
10	Microphone
11	Touchscreen 6.517"

## **8. Buttons**

### **Menu (virtual)**

Pressing it will cause the list of open apps to appear, where you can switch in-between or turn them off.

### **Home (virtual)**

One quick press takes you to phone desktop. A longer press launches Google Assistant.

### **Back (virtual)**

Press to exit the application / return to the previous screen.

### **Blockade on/off button**

- One quick press locks/unlocks the screen.
- One short press of the lock + volume up button launches the phone's shutdown or restart menu.
- Pressing the button for about 2 sec. will cause:
  - If the smartphone is off - the device would switch on.
  - If the smartphone is turned on - calling the Google assistant.

### **Volume increase and decrease buttons**

 
Pressing during a voice call will cause an increase or decrease of the audio connection volume.

## **9. Using the touch screen**

The smartphone's touchscreen makes it easy to select items, perform operations and gestures. The touchscreen can be controlled by the following actions:

### **9.1. Touch**


Touch one to start options, app, menu.





## 9.2 Swipe

 Quickly swipe up, down, to the left or to the right, to scroll the list or the screen.




## 9.3 Triple click

Quickly tap the screen three times to start zooming - if this option is enabled in your smartphone settings.




## 9.4 Hold and swipe

 Touch an element (an icon perhaps) and hold it for about 1 seconds. Then you can delete/uninstall that element.




## 9.5 Slide in and out

 Touch the screen with two fingers and slide them together or apart to zoom in or out a photo or a map.





## **10. Communication**

### **10.1 Making calls**


To make a call touch **[Phone]** icon  placed on the main screen or in Android applications menu. Insert the phone number you wish to call. Press "green handset" placed at the bottom of the screen and choose which SIM card you wish to use.

### **10.2 SMS - Messages**


You can manage your messages using the **[Messages]**  application in the home screen or smartphone menu. Start the

application and touch the icon , type the phone number, name of the contact or select a contact from the list. When you have chosen the contact a screen will appear where you type the message itself. Type the message body.

Before you send a text message you can transform it into a

multimedia message by pressing symbol , situated in the left corner of the textbox and adding a sticker, audio or location. To add a photo from the gallery or directly from your camera, tap the symbol



. To send the message press **SMS**.

## **11. Maintenance of the device**

Follow the instructions below.

- For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.
- Use the original accessories only. Violation of this rule may result in an invalidation of the warranty.

## **12. Correct disposal of used equipment**



The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use. The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources. Proper disposal of used electrical and electronic equipment is beneficial to human health and environment.

To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner, user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

## **13. Correct disposal of used battery**



According to the EU directive 2006/66/EC with changes contained in EU directive 2013/56/UE on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations.

It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, which allows them to return, recycle and disposal. Within the EU, the collection and recycling of batteries and accumulators is a subject to separate

procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.